

 
# **BJ3476** MOVEMENT INSTRUCTION



### A . Features

- ➤ 6 Digits LCD Display, Display Hour ,Minute ,Second ,Month ,Day and Week
- ➤ Daily Alarm and Chime hourly
- Snooze
- > 12 / 24H format selectable
- ➤ 1/100 second Chronograph with split functions
- ➤ LED backlight

# **B** . Operational Manual



## 1. At any state ,press A key lampions twinking showing in circle.

#### 2. Real Time

- Press C key to display Alarm ;Press D key to display Date .
- > Turn On / Off Alarm and Chime
  - a). Press C + D key to turn on / off Alarm ,indicator "  $\bigcirc$  " displaying for On .
  - b). Press C + B key to turn On / Off Chime, all days of week displaying for On.

#### 3. Chronograph

- The display range of the Chronograph is 23 hours ,59 minutes ,59.99 seconds.
- > Press D key to Start/Stop running:
- When stop ,press C key to zero .
- ➤ When running ,press C key to split count.
- Then press D key to exit split count, and stop counting;
- When exit split count press C key to display all counts; and press C key again to zero;
- When running press B key to return to Real Time Mode and it running at back.

### 4. Daily Alarm

- ➤ "Hour " flashing once entry Daily Alarm .
- ➤ Press C key to select "Hour " or "Minute "setting
- > Press D key to adjust the flashing item
- Press C key to confirm
- ➤ Press B key to return to Real Time mode
- ➤ Alarm Snooze ON/OFF

At Alarm sounding state ,press C key to stop sounding ,and press D key to ON/OFF snooze function .When Snooze function be ON ,it will sound five minutes later ,and auto stop after sounding for a minute .

2011-07-27 Model: BJ3476 Page: 1 / 2 Edition : A



# **BJ3476** MOVEMENT INSTRUCTION



## 5. Time Setting

"Second " flashing when loading ,press D key to zero; Press C key to select item as following sequence:

Minute → Hour → Day → Month → Week

- > Press D key to adjust the flashing item.
- ➤ When setting "Hour "," H " display for 2 4 H format; "A" or "P" for 1 2 H format.
- Press D key while the seconds are in the range of 30 to 59 resets them to 00 and adds 1 to the minutes. In the range of 00 to 29, the minutes are unchanged.

# C. Specifications

Module Size : Φ26.2mm
 Module Thickness (include buzzer): 8.9mm

➤ Operational Temperature Range : -10°C~60°C

Operational Voltage : 3.0V

Accuracy :  $\pm 90 \text{sec/month}$ 

➤ Battery Code : CR2025(capacitance: 170m Ah)

static average current
 ∴ ≤1.42u A
 ∴ ≤1.62m A
 ∴ ≤1.62m A
 ∴ ≤1.62m A
 ∴ ≤1.62m A
 ∴ ≤10.33m A
 ∴ ≤10.33m A
 ∴ (ELlighten maximum current : 20.0mA)

➤ Battery life : ≥24 month (Japan Lithium)

Under the following conditions:( 4 backlight operation ( 3 seconds) perday; 60 seconds of alarm operation per day)

|      | Prepared | Checked  | Approved |
|------|----------|----------|----------|
| Name | 冯碧颜      | 徐治中      | 宋检望      |
| Date | 11/07/27 | 11/08/09 | 11/08/09 |

2011-07-27 Model: BJ3476 Page: 2 / 2 Edition : A