


# **BJ3325** MOVEMENT INSTRUCTION



### A . Features

- ➤ 6 Digits LCD Display, Display Hour, Minute, Second, Month, Day and Week
- ➤ Daily Alarm and Chime hourly
- Snooze
- ➤ 12 / 24H format selectable
- ➤ 1/100 second Chronograph with split functions
- ➤ EL backlight

# **B** . Operational Manual

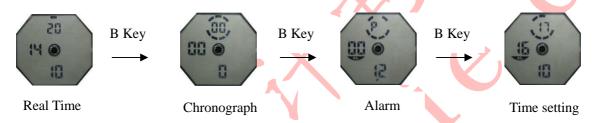

## 1. At any state ,press A key EL backlight for 3s.

#### 2. Real Time

- Press C key to display Alarm; Press D key to display Date.
- > Turn On / Off Alarm and Chime
  - a). Press C + D key to turn on / off Alarm, indicator "displaying for On.
  - b). Press C + B key to turn On / Off Chime, all days of week displaying for On.

#### 3. Chronograph

- The display range of the Chronograph is 23 hours ,59 minutes ,59.99 seconds.
- Press D key to Start/Stop running;
- When stop ,press C key to zero .
- When running ,press C key to split count.
- Then press D key to exit split count, and stop counting;
- When exit split count press C key to display all counts; and press C key again to zero;
- When running press B key to return to Real Time Mode, and it running at back.

### 4. Daily Alarm

- ➤ "Hour " flashing once entry Daily Alarm .
- > Press C key to select "Hour " or "Minute "setting
- Press D key to adjust the flashing item
- Press C key to confirm
- ➤ Press B key to return to Real Time mode
- Alarm Snooze ON/OFF

At Alarm sounding state ,press C key to stop sounding ,and press D key to ON/OFF snooze function .When Snooze function be ON ,it will sound five minutes later ,and auto stop after sounding for a minute .

2010-05-24 Model: BJ3325 Page: 1 / 2 Edition : A



# **BJ3325** MOVEMENT INSTRUCTION



## 5. Time Setting

"Second " flashing when loading ,press D key to zero; Press C key to select item as following sequence:

Minute → Hour → Day → Month → Week

- > Press D key to adjust the flashing item.
- ➤ When setting "Hour "," H " display for 2 4 H format; "A" or "P" for 1 2 H format.
- Press D key while the seconds are in the range of 30 to 59 resets them to 00 and adds 1 to the minutes. In the range of 00 to 29, the minutes are unchanged.

# C. Specifications

Module Size

Module Thickness

> Operational Temperature Range

Operational Voltage

Accuracy

Battery Code

> static average current

> EL lighten average current

➤ Alarm average current

➤ Battery life (90%)

: Φ33.25mm (include outstanding)

: 9.6mm (include buzzer)

: -10°C~60°C

: 3.0V

 $\pm 90 \text{sec/month}$ 

: CR2025(capacitance: 170m Ah)

 $\leq 1.21 \text{u A}$  (static maximum current : 3.5uA)

: ≤7.50m A (ELlighten maximum current : 10mA)

: ≤2.49m A (Alarm maximum current : 7.0mA)

: ≥24 month (Japan Lithium)

(Battery life calculate according to EL lighten four time each day for 3 second each time, alarm foe 60 seconds each day)

	Prepared	Checked	Approved
Name	冯碧颜	徐治中	宋检望
Date	10/05/24	10/05/24	10/05/24

2010-05-24 Model: BJ3325 Page: 2 / 2 Edition : A